



TLA252-TLA253

DIRECTORY	
1. EXTERNALITY OF PAGER.....	3
2. DESCRIPTION OF KEYS.....	4
3. LCD AND ICON.....	5
4. MAIN MENU FOR FUNCTION SETTING.....	7
4.1 Power on/off pager.....	7
4.2 Alert setting mode.....	9
4.3 Clock & calendar setting mode.....	10
4.4 Alarm setting mode.....	12
4.5 Contrast level setting mode.....	14
5. READ MESSAGE.....	16
5.1 Read private message.....	16
5.2 Read maildrop message.....	18

6. MESSAGE CONTINUE.....	19
7. MESSAGE LOCK.....	20
8. MESSAGE UNLOCK.....	21
9. MESSAGE ERASE.....	22
9.1 Delete one message.....	22
9.2 Delete all messages.....	24
10. DUPLICATE MESSAGE.....	25
11. ERROR MESSAGE.....	26
12. UNREAD MESSAGE ALARM.....	26
13. LOW BATTERY INDICATION OR ALARM.....	27
14. BACKLIGHT.....	28
15. OUT OF RANGE INDICATION.....	28
16. STANDBY MODE.....	29

1. Externality of pager



Function button Select button Read button

2. Description of keys

[] Read button:

- To read received messages.
- To turn on the pager.
- To confirm the function which was selected.
- To add contrast level.

[] Select button:





- To select function in function selection mode.
- To select the message which to be read.
- To decrease contrast level.


[] Function button:

- To select main private menu, maildrop menu, function setting menu.
- To exit current function mode.
- To confirm function selection and exit function mode.

3. LCD and ICON:

(1). Indication icon

- [] pager operation indication
- [] audio or melody alert is selected
- [] vibration alert is selected
- [] silent alert is selected


[] alarm is enabled


[] unread message

[] duplicate message

[] message locked

[] range indication

[] low battery indication

[] continue page message

[X] error message indication

(2). Status display of LCD.

 
- [🔔] alarm is alerting while icon displays
- [📧] main menu for private message
- [📧] main menu for maildrop message

4.Main menu for function setting

4.1 Power on /off pager

4.1.1.Turn off pager

In standby mode,press any button to enter clock display mode.



7

 
Press Read button [] , the screen displays following icon:



Press Select button [] three times to display .



Press Read button [] one time to display.




Press Read button [] once again, the pager will enter into 'off' mode. Then nothing is shown on the screen.

8


4.1.2. Turn on the pager

 In pager off mode, press [] for about 2 seconds to turn on the pager,the screen display as follows.



4.2.Alert setting mode.

 In clock display mode, press [] to enter function selection mode.



9

Press [] once again to display as below.



Press [] button to move the blinking icon from audio 1 all the way to melody 8.

Audio tone pattern, vibration, silent and melody are generated, while the corresponding icon blinks .

Press [] to confirm and return to clock display mode. Before pressing the confirm button, press [] to return to clock display mode without changing any setting.

 
10

4.3. Clock & calendar setting mode.


In clock display mode, press [] to enter function selection mode.



Press [] one time to display.



 Press [] to enter time and date setting mode.



11

The digits '12hr' or '24hr' blink , press [] to select '12hr' or '24hr'. press [] to confirm and hour digit blinks. press [] to add hour digit, press [] to confirm and the minute digit blinks .

press [] to add minute digits from 00 to 59.

press [] to confirm and the month letter 'JAN' blinks,

press [] to add month field from 'JAN' to 'DEC'.

press [] to confirm and the day digits '01' blink.

press [] to add day field from 00 to 31, press

[] to confirm and the year digits '99' blink, press

 
[] to add year field from 99 to 19, press [] to confirm and '12hr' or '24hr' digits blink again.

press [] to confirm and return to clock display mode.


12

4.4. Alarm setting mode:


In clock display mode, press [] to enter the function selection mode.



Press [] twice to display.

 

 Press [] to enter alarm 1 setting mode, the alarm 1 digit '1' blinks .




13

Press [] to confirm, alarm 1 is selected and the letter 'OFF' blinks, press [] to select the 'ON' or 'OFF', press [] to confirm and the hour digits '12' blink, press [] to add the hour field , press [] to confirm and the minute digits '00' blink. press [] to add minute field from 00 to 59. Press [] to confirm and return to clock display mode, you can repeat same procedure to activate other alarms.


Totally 3 alarms can be set.

14


4.5 Contrast level setting mode.

In clock display mode, press [] to enter function selection mode.



press [] four times to display,



press [] to enter contrast level setting mode.




15

You can adjust desired contrast level.

Press [] to decrease contrast level

Press [] to increase contrast level

Press [] to confirm and return to the clock display mode.


5. Read message.


5.1 Read private message

5.1.1 When a private message has been received, the alert is turned on, the first page of received message is shown on the screen .




16




If the message is duplicate message, the icon [] will display at the bottom of the screen.

5.1.2 In clock display mode, press [] key one time to display private message menu, as follows:




press [] key to select message No., press [] key to read message. After reading message, press [] key to display the time of receiving message.

17



press [] key again to return to private message menu.

5.1.3 The pager can store private messages not more than 20.

5.2 Read maildrop message

5.2.1 In clock display mode, press [] key two times to display maildrop message menu, as follows:



press [] key to select message No., press [] key to read message.

 

5.2.2 If the pager receives a new maildrop message while


18

reading maildrop message, this new maildrop message will display on the screen. All maildrop message do not alert after received.

5.2.3 The pager can store maildrop message not more than 20.



 
6. Message continue


If content of received message is more than one page, the continue page icon [] is shown at the down right corner of the screen, press [] key to read next page.




19

7. Message lock

 
In private message or maildrop message reading mode, press [] to display 'LOCK MESSAGE ?' on the screen, press [] to confirm and return to private or maildrop message menu display mode, the [] icon is shown at the bottom of the screen.





If pressing [] key to return to private message or maildrop message menu before pressing the confirm button, the message can not be locked.

20

Not more than 10 private messages or maildrop messages can be locked.

 
Note: After [] button is pressed to confirm, there will be a sound to show this message has been locked, but if three sounds are heard, it shows room for locked messages is full and this message can not be lock.


8. Message unlock

While reading the locked message, press [] to display 'UNLOCK MESSAGE ?' on the screen, press [] to confirm and return to private or maildrop message menu

21


display mode.




Before pressing confirm button, press [] to return to private or maildrop message menu display mode and without unlocking this message.

9. Message erase.


9.1 Delete one message.

 In private or maildrop message reading mode, select the message you wish to delete, press [] to display.



22

 Press [▶] to display.




Press [●] button to confirm and return to private or maildrop message menu display mode. Before pressing the confirm button, press [■] to return to private message or maildrop message menu display mode without deleting any message.

Note: Locked message can not be deleted. After [●] button is pressed, there will be a sound to show this message has been deleted.

23

16. Standby mode.

 
The pager will return to standby mode automatically, if no button pressed within 12 seconds in any mode and



Press [▶] button five times to display.



 Press [■] button again to display.



24

Press [■] button again to confirm all messages are deleted and return to clock display mode. Before pressing the confirm button, press [●] button to return to clock display mode without deleting any message.

Note: Locked message, Unread message can't be deleted. After [■] button is pressed, there's a sound to show all messages have been deleted.

 
10. Duplicate message.

When a duplicate message has been received, the pager will display duplicate icon [□], and time stamping will be updated.

25

11. Error message

If there's an error message, 'X' will display in private or maildrop message menu.



12. Unread message alarm

The pager gives out an audible alert once for about 3 minutes without display, when there is unread private message.

Note: The interval of 3 minutes is only to be consulted.

26

13. Low battery indication or alarm

A low battery icon [⚡] displays at the bottom of the screen, if the pager's battery power is running low. You' better soon install a new battery.

The pager gives out an audible alert once for about 5 minutes without display in low battery mode.

Note: 1. You' better turn off pager before changing battery.

2. The interval of 5 minutes is only to be consulted.

27

14. Backlight.

Press any key and hold for 2 seconds in any operation mode to turn on the backlight. Press any key and hold for 2 seconds again to turn it off. When the pager enters standby mode the backlight will be turned off automatically.

15. Out of range indication.

There is not an icon [Ψ] for out of range indication.

Note: Generally speaking, Whether there is an icon [Ψ] for out of range indication or not depends on the service section.

28

16. Standby mode.

The pager will return to standby mode automatically, if no button pressed within 12 seconds in any mode and only [⏻] icon displays on the screen.